




Canon EOS 30 LCD Screen Replacement

How to remove and replace the LCD screen.

Written By: Sterling Vinson

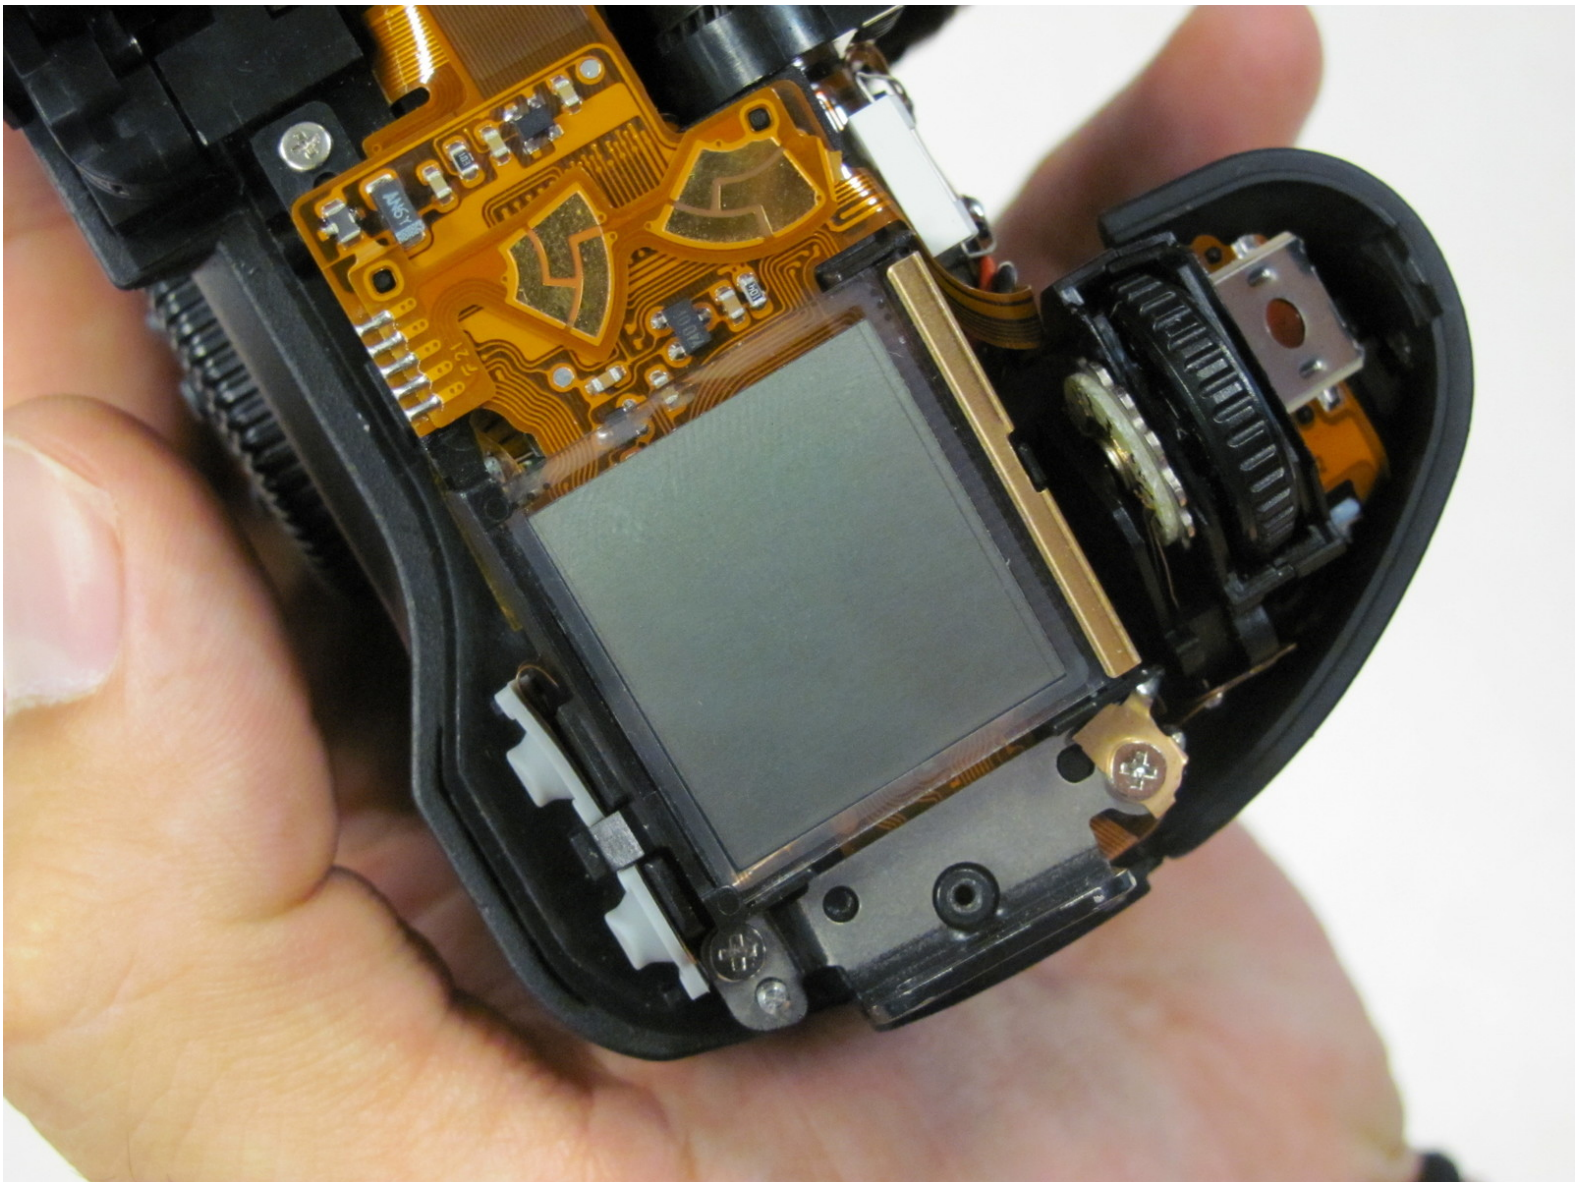

INTRODUCTION

This guide will show you how to access, remove, and replace the LCD screen. The process is safe and uncomplicated.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Front Panel



- Remove two 4.8 mm black screws on the front of the camera.

Step 2



- Remove one 4.3 mm black screw under the lens ring and one 4.8 mm black screw on the bottom of the camera.

Step 3



- Remove one 4.8 mm black screw on the left side.

Step 4



- Remove the front panel by lifting out the side opposite the grip.

Step 5 — Top Panel



- Slide the outer eyepiece upward to remove it.

Step 6



- Remove two 4.75 mm Phillips #00 screws from top of camera.

Step 7




- Remove four 4.3 mm Phillips #00 screws from back of camera.

Step 8




- Slowly separate top panel from camera by pushing up.
- ⚠ Be careful, as top panel is still attached by wiring and ribbon cable to the camera.

Step 9

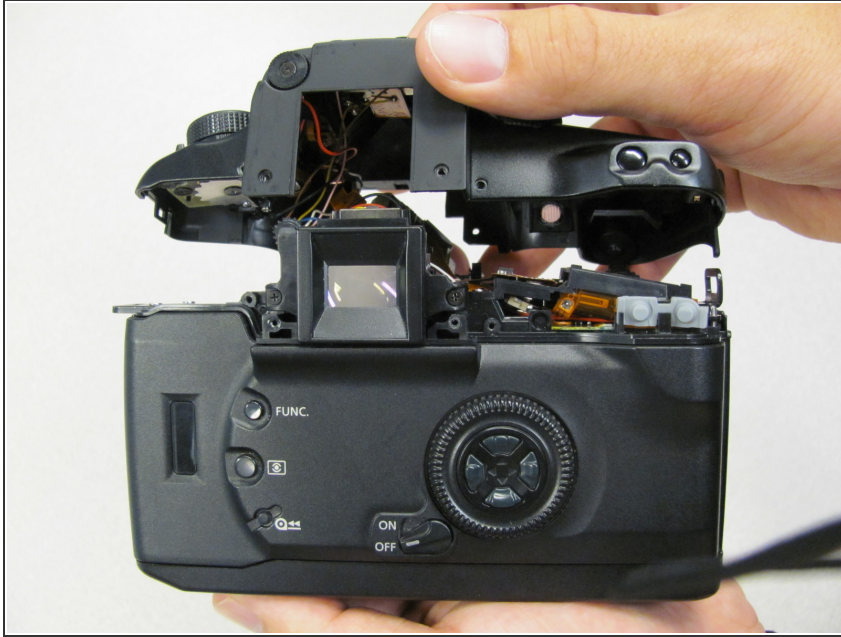


⚠ Separating the top panel too far can damage the connecting wiring.

Step 10 — LCD Screen

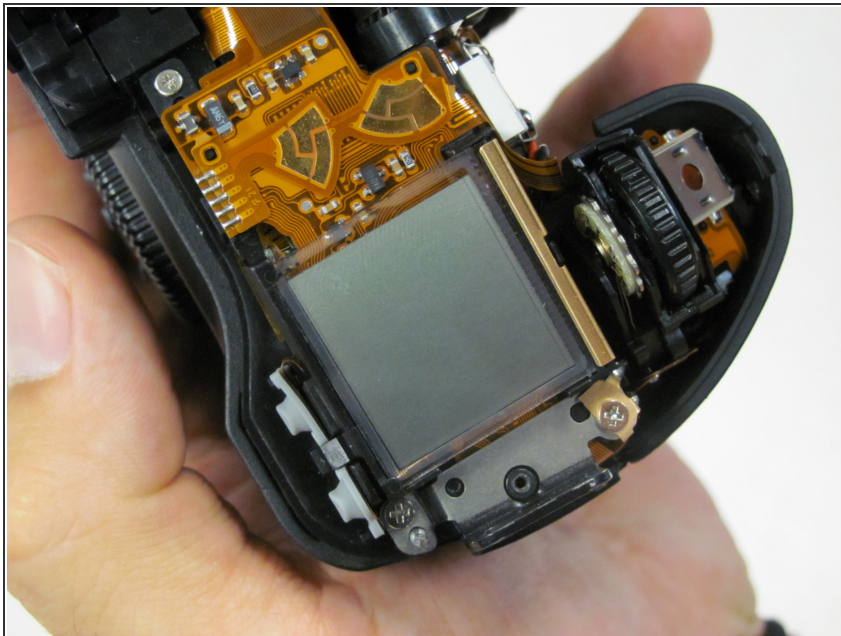

- To unclip gold connector push the edge up and away from the lcd screen. A plastic opening tool is recommended.
- The gold connector can fall into the camera, but it will remain attached and can be pulled back up.

Step 11

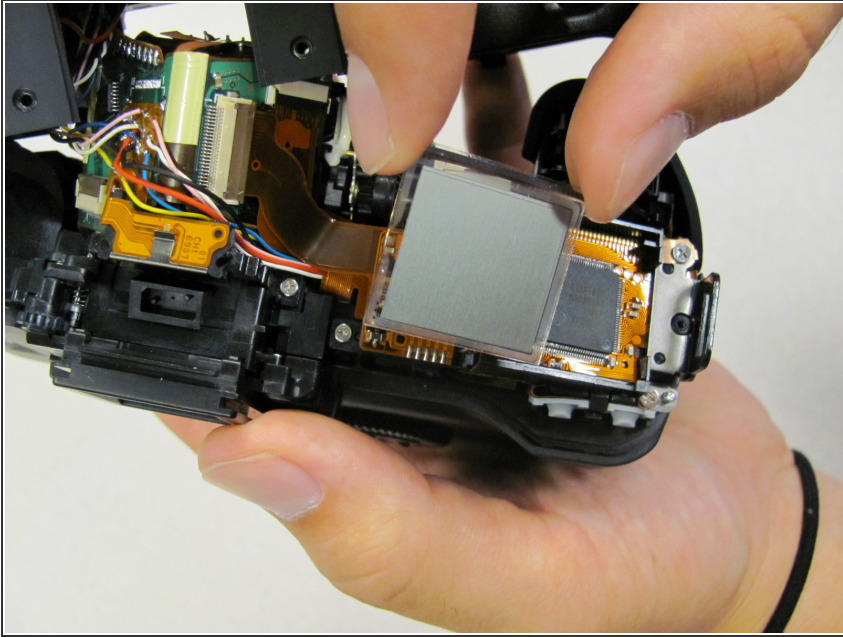

- Lift LCD screen out of mount.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-11 10:12:31 AM.